


System Component Layout

The following layout will help you find the parts and components in your Emergency Lighting Inverter. Do not attempt to service. If you need technical assistance, please contact DSPM.

Maintenance should only be performed by factory-trained or qualified personnel.

- 1 - DC Caps
- 2 - Main Power Board
- 3 - Processor Board
- 4 - Input Filter Board
- 5 - Display
- 6 - Output Filter Board
- 7 - Manual Bypass Switch
- 8 - Input Transformer
- 9 - Output Transformer
- 10 - Input Terminal Block
- 11 - AC Input Circuit Breaker
- 12 - Battery Circuit Breaker
- 13 - Output Terminal Block
- 14 - Output Circuit Breaker
- 15 - Terminal Blocks
- 16 - Output Branch Breakers (optional)
- 17 - Batteries
- 18 - Blower
- 19 - Fan(s)

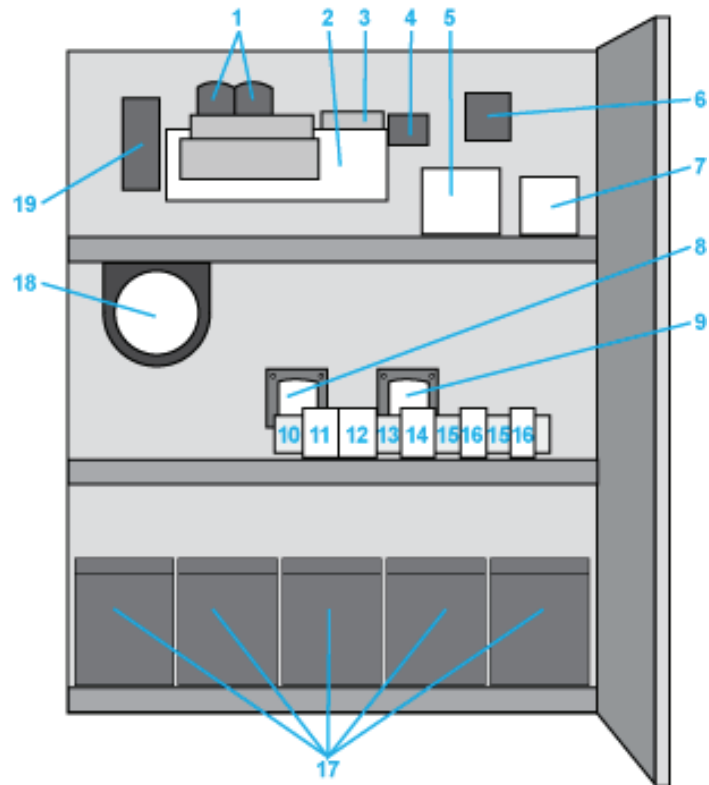

- 1 - Battery Layout Diagram
- 2 - Battery Jumpers
- 3 - Interconnect Cables for Batteries

